




Wahl Lithium Ion Trimmer Lithium Ion Battery Replacement

This single battery that sits on top of the circuit may die or become un-chargeable, our guide will explain how and where to connect wires and what specific battery to purchase.

Written By: nathan

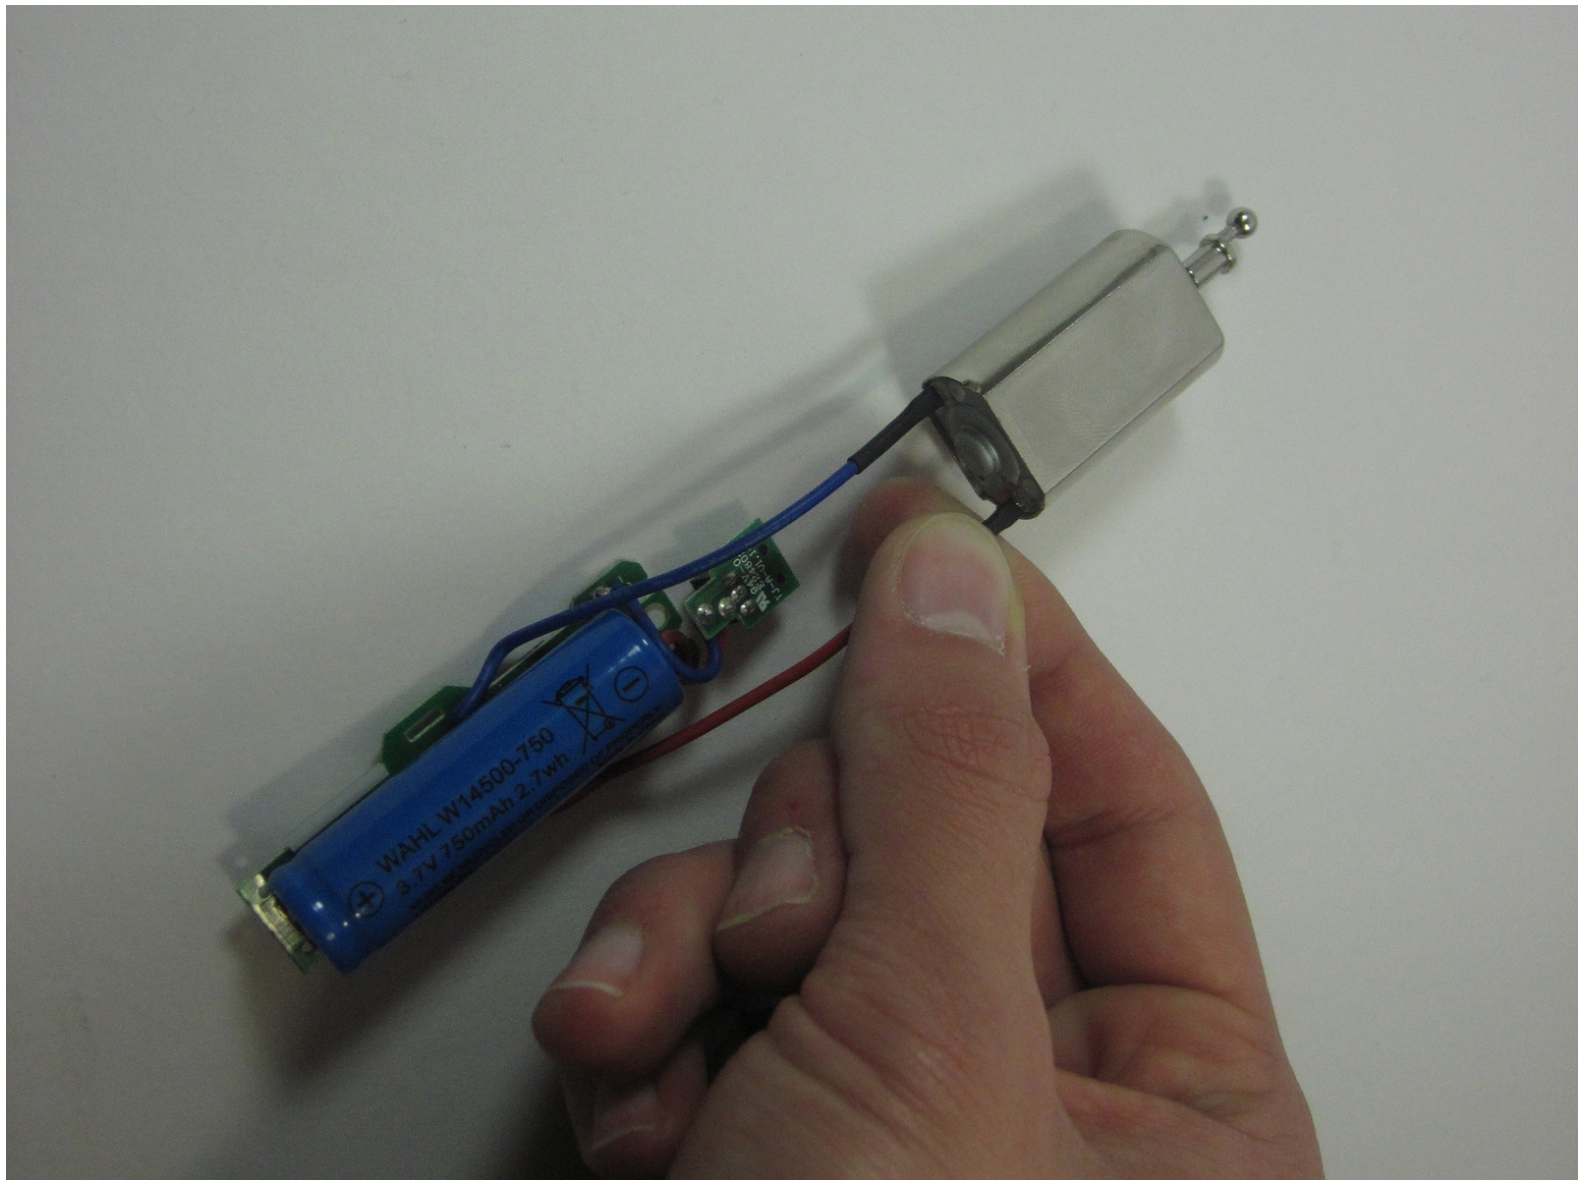



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Disassembling of Wahl Lithium Ion Trimmer



- Begin by removing the rubber grip along the handle.

Step 2

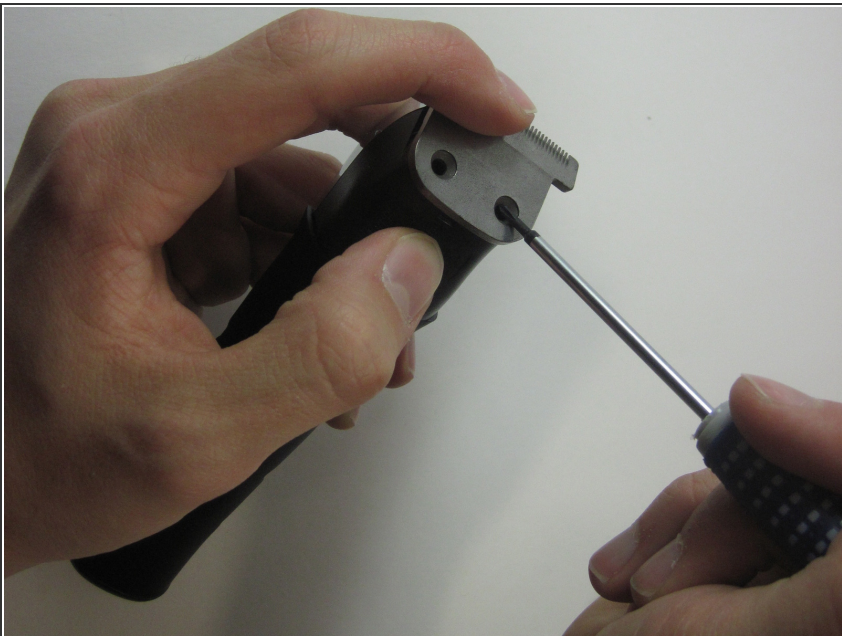


- Remove the screws from the top to take the metal piece and plastic part off.

Step 3




- Pry open the plastic cover into two separate pieces. The plastic is very durable so don't worry about breaking it upon prying it open.

Step 4

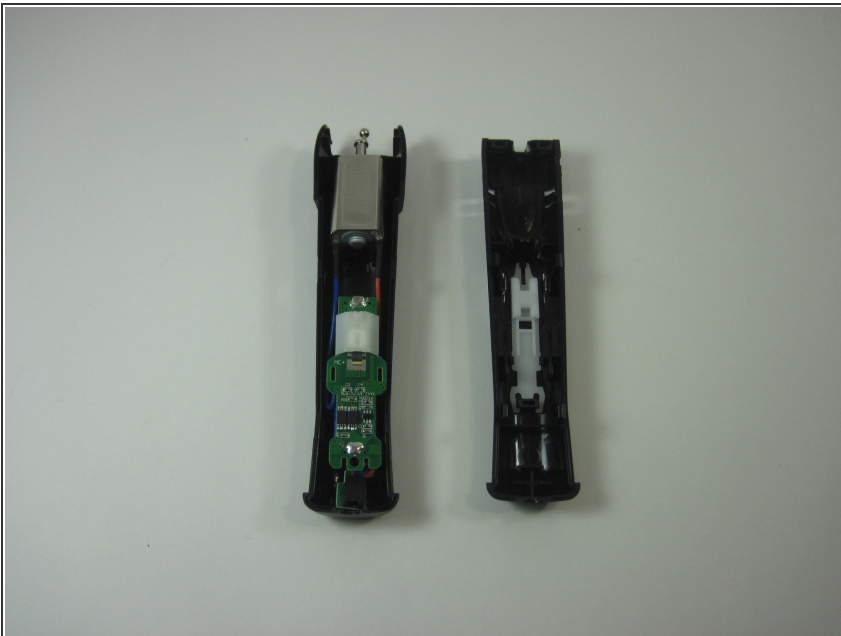


- Here is the final result. This gives access to the switch button, chip set, battery and motor.

Step 5 — Lithium Ion Battery Replacement

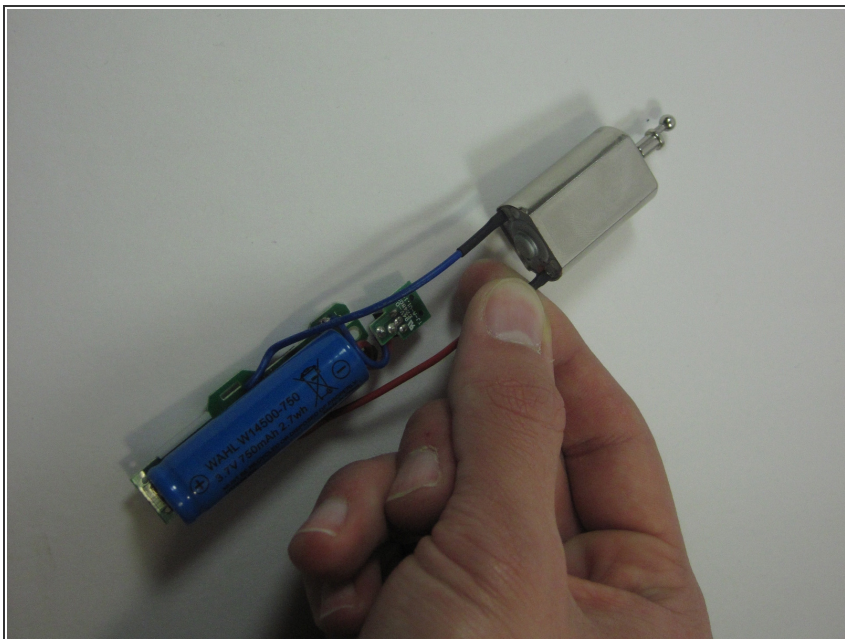


- Remove the chip set, motor and battery from the plastic body. This photo shows the motor and wires connecting it to the battery.

Step 6

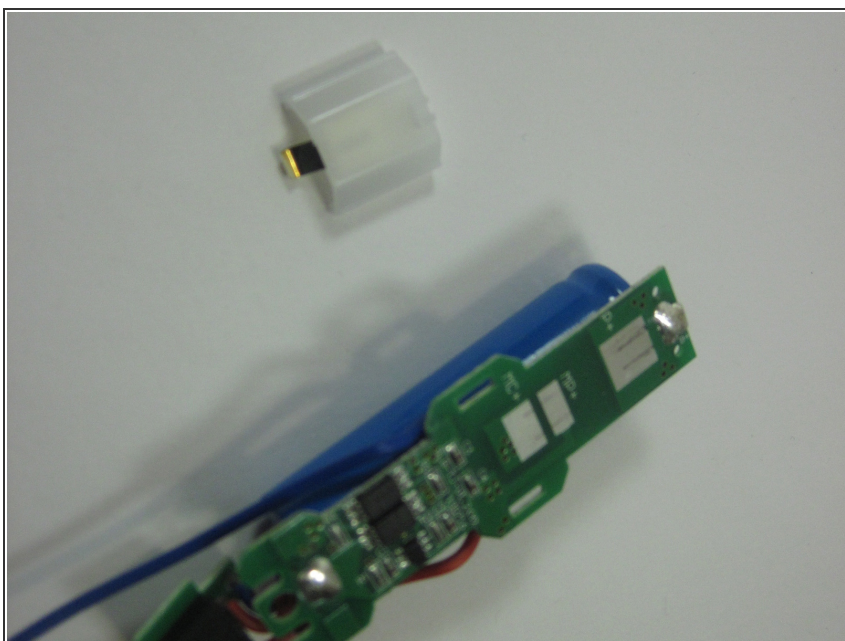

- Remove the white plastic cover over the chip set allowing the battery to be taken off.

Step 7

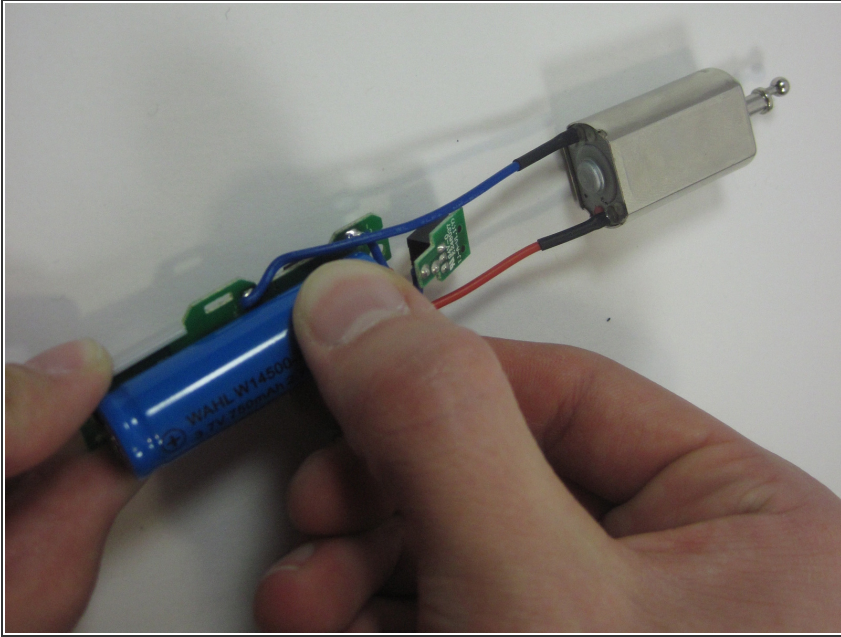

- Remove the Lithium Ion Battery and replace it with the new one that you purchased.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-13 12:35:06 PM.